

JENVEY

Linkage assemblies
Issue 2
© Jenvey Dynamics 1999 - 2010

Turn bracket 'A' to change reach range.

Reverse assembly to lead cable in opposite direction

